



VNM HANDBRAKE V1.5 Quick Guide

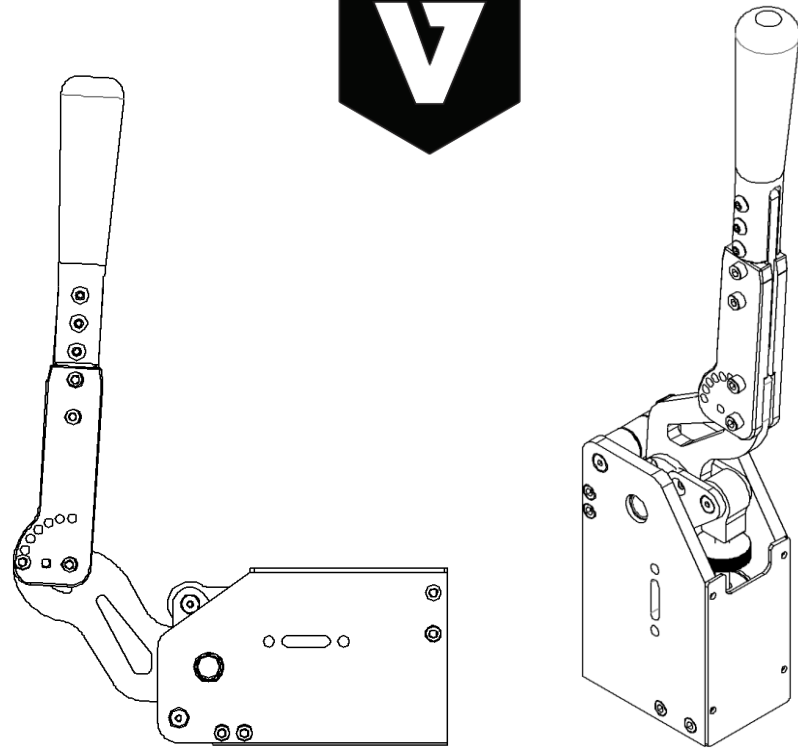

Content

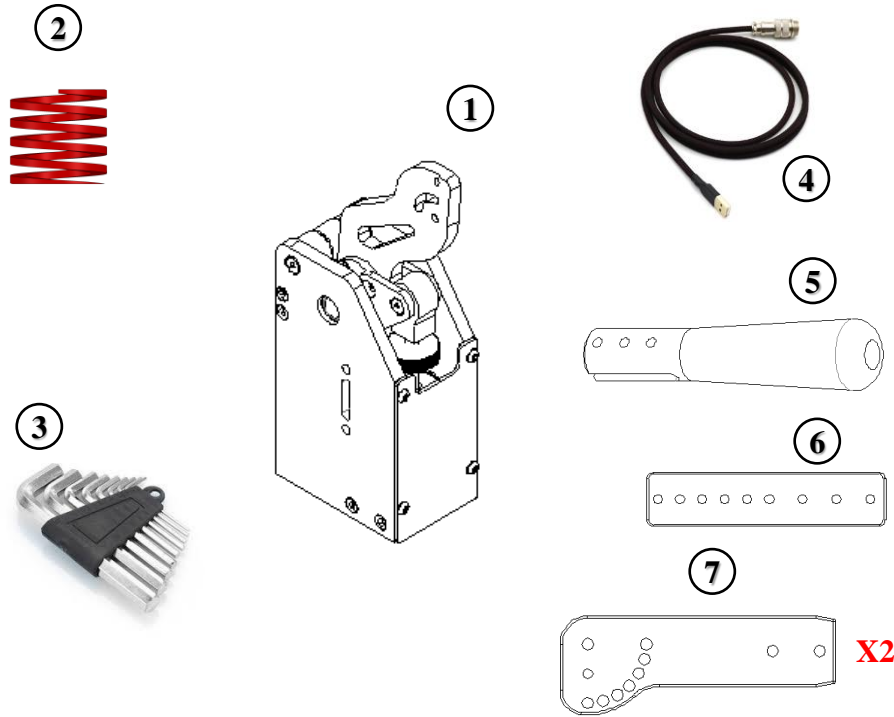


- 1. VNM Handbrake V1.5 body
- 2. Red (stiffest), blue (stiffer) springs
- 3. Allen key set

- 4. USB A male – GX12 male cable
- 5. Handle
- 6. Handle extension
- 7. 0-90 degree conversion adapter (2 pcs)

Connection


- ✓ On the left side of the Handbrake: XH2.54-4P port for load cell connection

- ✓ On the right side of the Handbrake is:
 1. Switch DFU/Game Mode Slide left side to select DFU Mode or right side to select Game Mode

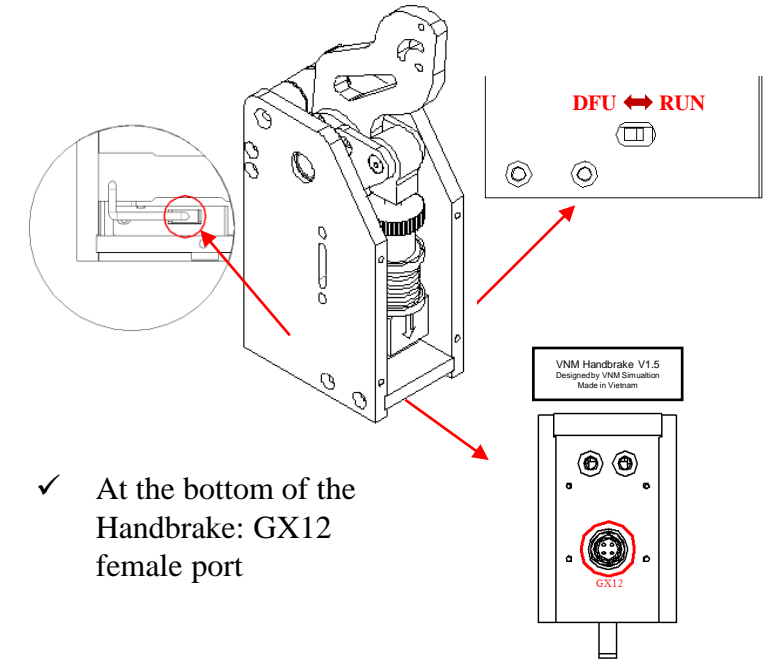


- ✓ At the bottom of the Handbrake: GX12 female port

Set up

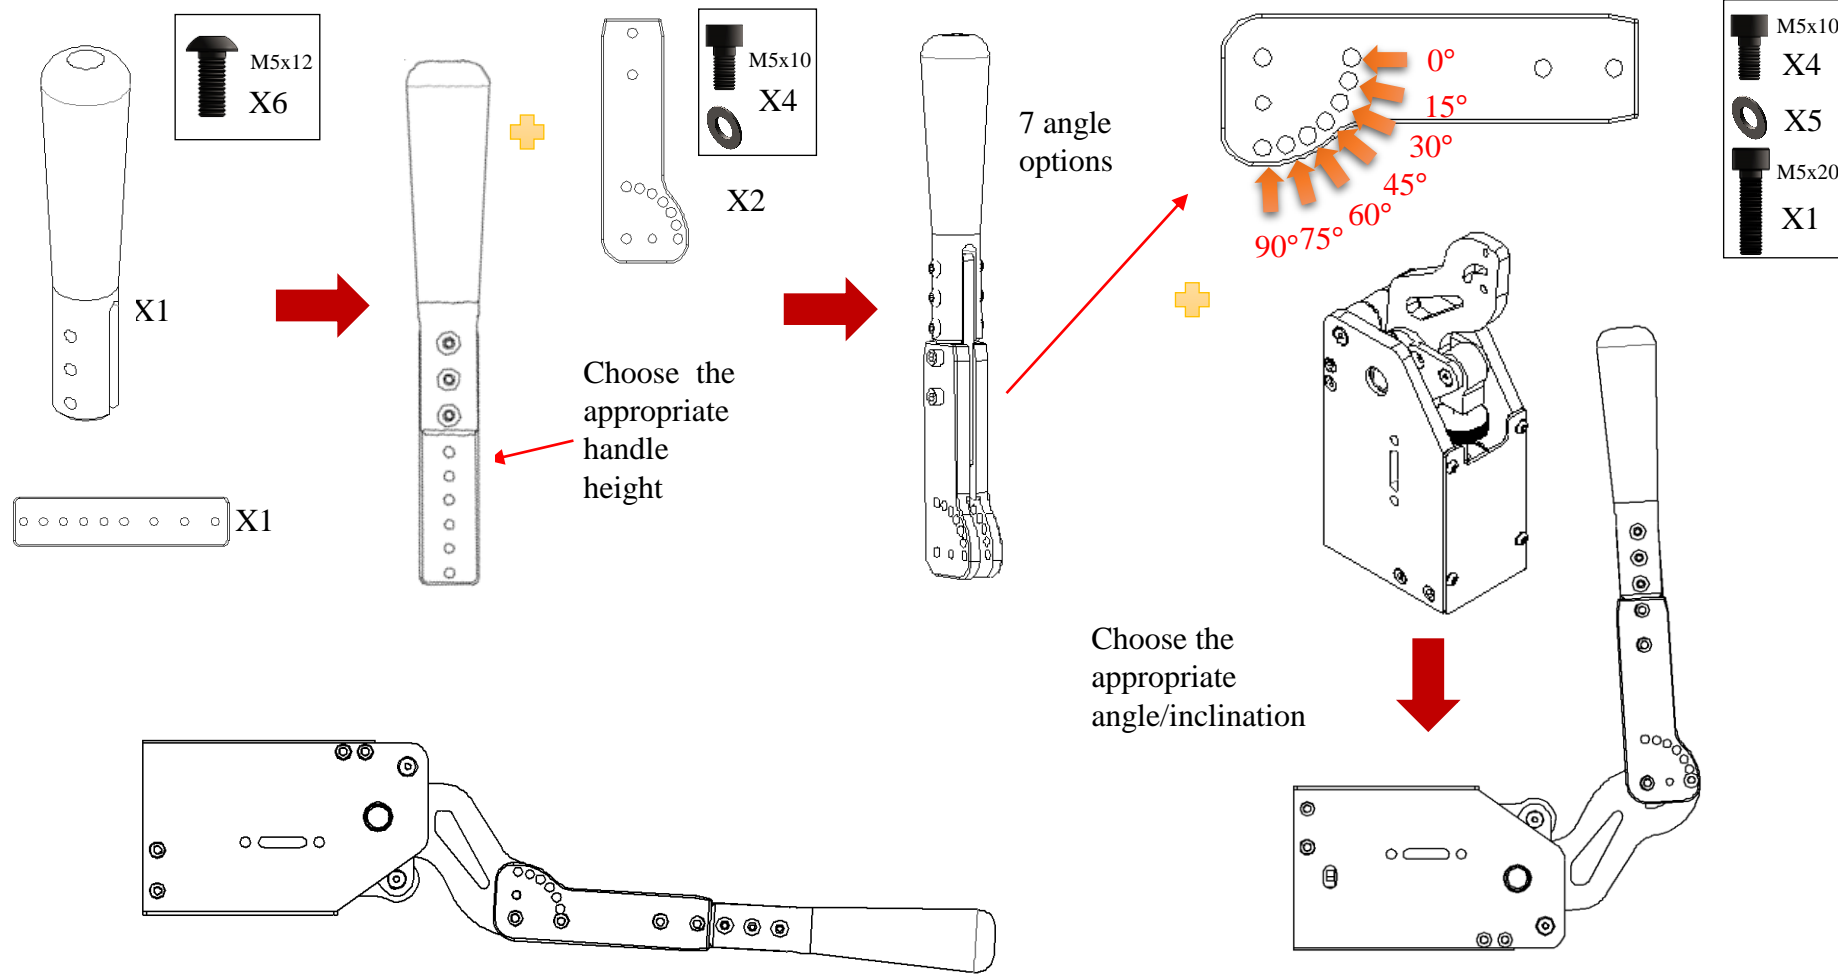


Adjust Handbrake

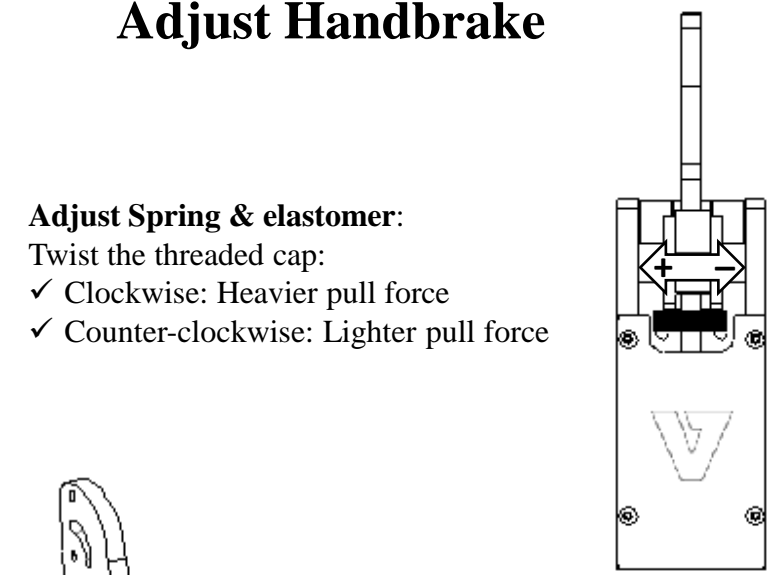


- Adjust Spring & elastomer:**
Twist the threaded cap:
- ✓ Clockwise: Heavier pull force
 - ✓ Counter-clockwise: Lighter pull force

- Adjust the angle of inclination:**
- ✓ Remove the 2 bolts on both sides
 - ✓ Pull out the endstop part
 - ✓ Choose the angle of inclination by rotating the endstop part
 - ✓ Push the endstop part in the sliding slot
 - ✓ Tighten the bolts.

Mounting Drawing

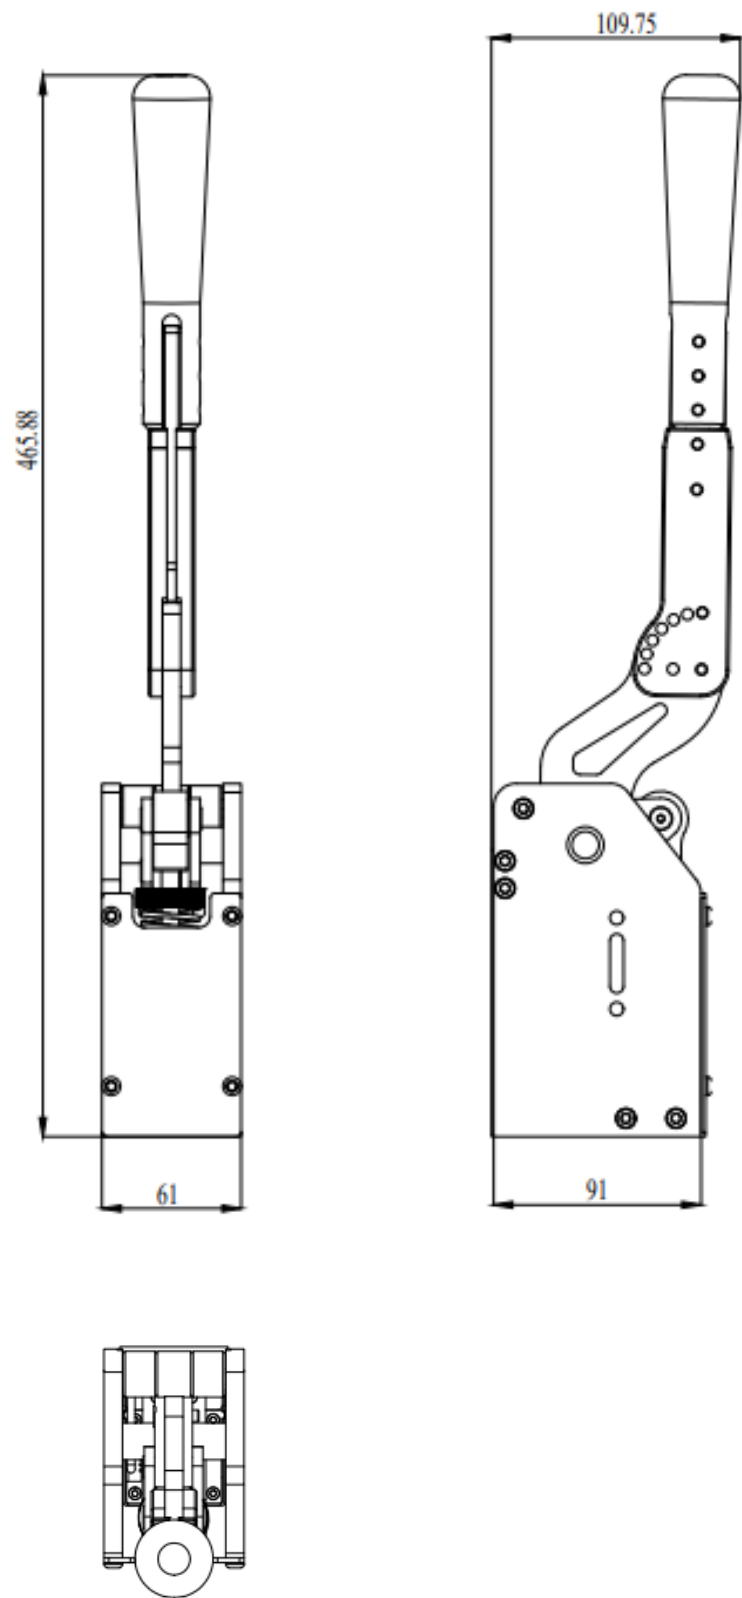

Clamps Size

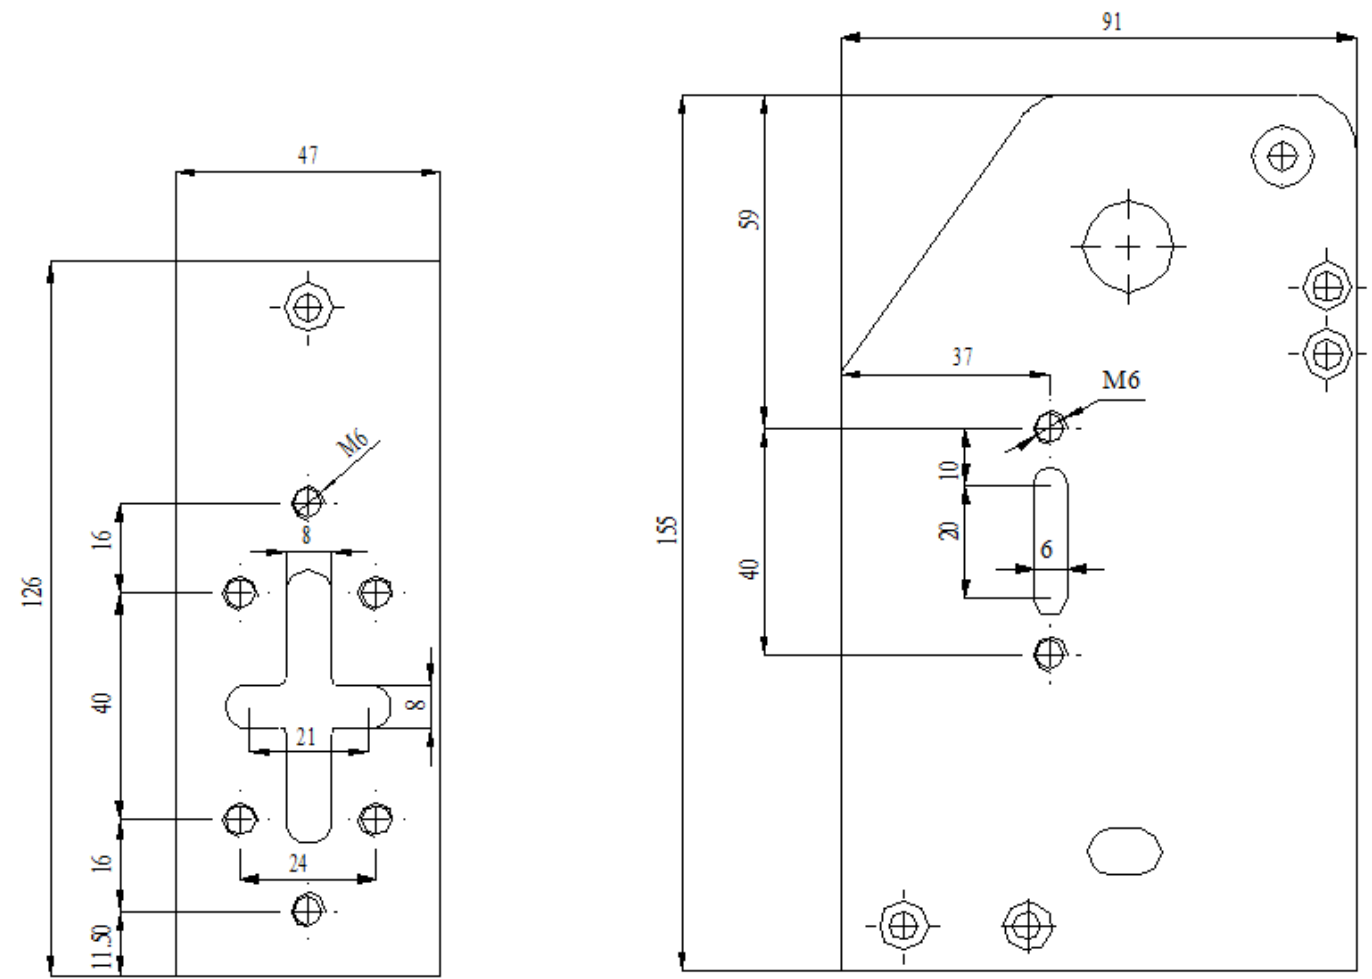

Exchange Spring

